

FFOB-122
Stainless Steel Lid
2 x 10Amp Square
Autoswitched GPOs

FFOB-122B
Brass Look Lid
2 x 10Amp Square
Autoswitched GPOs

AT A GLANCE

Capacity: 2 x Square
Autoswitched GPOs
Lid Material: Stainless Steel or Brass Look
Brass Look
Lid Size: 145 x 154mm
Box Size: 119 x 119 x 63mm
Recess Size: 139 x 139 x 73mm



This Floor Box Weighs Up To: 1.7KG's

Features

Stainless Steel or Brass Look Pop-up Lid - 145 x 154mm pops up from its' housing below.


Lid mounted Outlets - mounted directly to the pop-up cover, 2 x 10Amp Square Autoswitched GPO (supplied)

Temporary Lid - secure to body with a provided Screw x 4 during concrete pour to prevent ingress of slurry


Cast Aluminium Box Body - 119 x 119 x 63mm deep. Has 7 x 22mm conduit knockouts and 6 x 27mm conduit knockouts

Block-out in concrete slab 139 x 139 x 73mm nom.
Cut-out in raised floor 121 x 121mm nom.



Above View

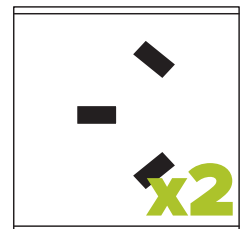

Cut-Out Side View

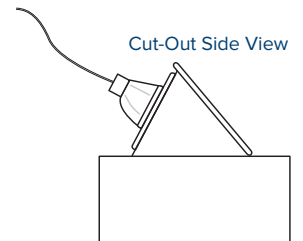

Side Elevation

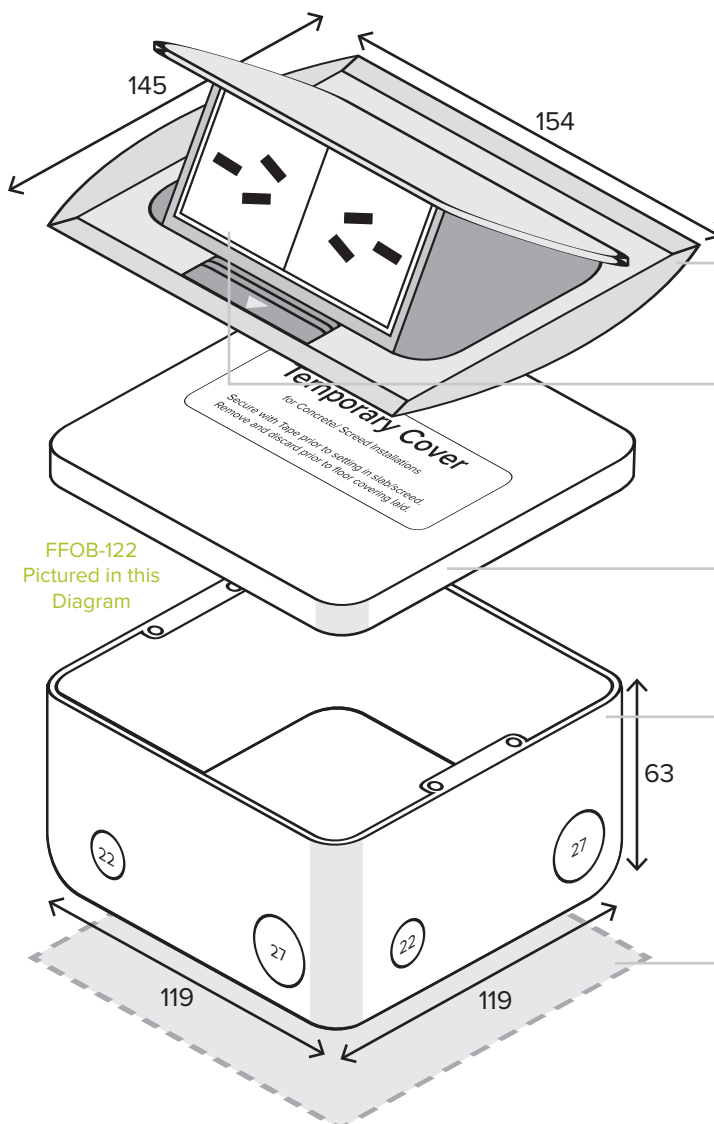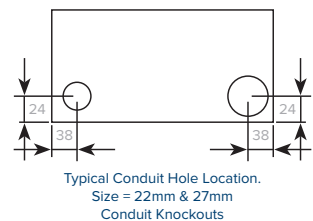

FFOB-122
Pictured in this
Diagram

**Suitable For Up To
CAT6 Cabling**

All Dimensions quoted are nominal only. Drawings, images and diagrams are for illustrative purposes only and are not to scale. Product details and dimensions are subject to change without notice. This product is not suitable for use in wet areas, is intended for use with fixed wiring only and must be installed by a licensed electrical mechanic in accordance with AS3000, SAA Wiring Rules and A.C.A Requirements





STEP 1: PREPARE AREA FOR INSTALLATION

OPTION 1. SLAB/ SCREED INSTALLATION

- Secure Aluminium Box Body housing (119x119x63mm) to structural slab (recommended) or within preformed recess/blockout (139x139x73mm). Ensure Box Body is positioned to finish flush and level with final slab surface and is secured to prevent 'dipping' or 'floating' within screed
- Positioning and securing the Box Body accurately will prevent operation/installation problems at later stages
- Connect conduits to Aluminium Box Body at desired location(s) and cover opening in box body using the Temporary Cover to prevent screed entering the box. Cover screw heads using duct tape, to allow screw removal after screed hardens.

IMPORTANT: SEAL ANY GAPS AROUND CONDUIT ENTRIES WITH SEALANT OR DUCT TAPE PRIOR TO SCREEDING IT

OPTION 2. RAISED/ TIMBER FLOOR, DESK OR COUNTER TOP

- Remove & Discard Temporary Cover. Cut aperture (117x117mm) in floor at desired location. The Floor/ Desk/ Counter is then sandwiched between Outlet Mechanism (above) and Aluminium Box Body (below).

OR

- Remove & Discard Temporary Cover. The Aluminium Box Body may be dropped into a 121x121mm aperture and screw fixed through the sides - near the top opening - to prevent it from being lifted out. An adhesive sealant may also provide additional rigidity - apply to the area where the Aluminium Box Body meets the Floor/ Desk/ Counter. Do not attach Floor Box Outlet Mechanism until any adhesive is hardened so as to avoid contact with lid hinges.

STEP 2: FLOOR BOX LID INSTALLATION

- Remove Temporary Cover from Aluminium Box Body (if not done so already when installing in a raised floor, desk or counter top)
- Lay and trim floor surface (carpet, vinyl, tiles etc) to the size of the *FLOOR BOX ALUMINIUM BOX BODY* for 122 & 122B
- Terminate by fitting bootlace terminals supplied to end of cable. Crimp bootlace terminal and insert into correct location on terminal block (as per AS3000) ensuring all metal components maintain earth continuity
- Fit Outlet Mechanism using M5 countersunk screws supplied and test the operation of the unit. Small adjustments in tightness of screws will move cover from side to side. Slowly tighten and test until correct cover position is found.

IMPORTANT: TEST ALL CONNECTIONS PRIOR TO OPERATION

